



Stoeger® AIRGUNS


3-9x40AO with 1 block mount Riflescope operating instructions

Congratulations and thank you for purchasing your new STOEGER SCOPE.


IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS SCOPE. THIS MANUAL SHOULD ACCOMPANY THE SCOPE IN CASE OF CHANGE OF OWNERSHIP.

Be sure that your airgun is not loaded before fitting scope and mount onto the rifle. Always follow safety procedures.


Do not look through the scope at the sun as it may cause permanent damage to your eyes.

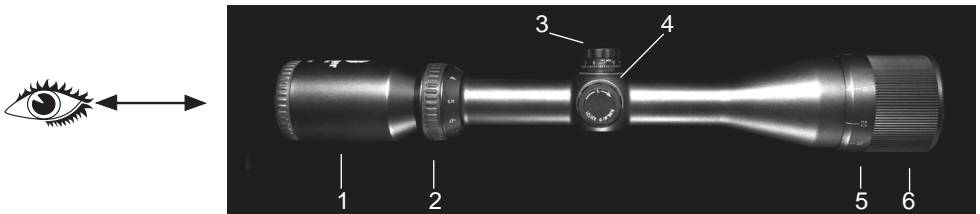

-
1. Eye piece
 2. Power ring
 3. Elevation adjustment
 4. Windage adjustment
 5. Objective
 6. Parallax adjustment ring

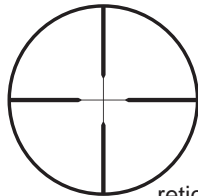

reticle

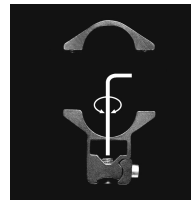

stop screw

Be sure to have right distance between your eye and eye piece, around 8cm / 3,1" is standard.

Assembling:

Remove upper halves of rings, place lower part on the airgun rail with stop screw in the notch of the rail. Tighten side screw. Place scope in cradle formed by both lower halves rings. Slide scope back and forth while looking through the scope eye piece until you have a fully lit field of view. Rotate the scope to align the reticle horizontally and vertically. Then replace upper halves of rings and tighten ring screws completely.

Adjusting and sighting in:

Since zeroing involves actual shooting of live pellets, it should be done at an approved shooting range. Benchrest the airgun. Turn the power ring **3** to the highest setting. Set the adjustable objective ring **6** (parallax adjustment) at the proper distance. Fire 3 pellets at the target which is set at 30yards from where you are shooting.

Point of impact can be adjusted by turning the elevation and windage screws:

- shooting low, turn elevation screw **3** toward "UP"
- shooting right, turn windage screw **4** toward "L"

Taking care of your scope:

When not in use, the scope should be kept in a clean, dry and ventilated place away from any corrosive material.

Never try to take the scope apart or clean internally. Send your scope to qualified service station if it never need repair. Lens surface may be cleaned with lens cloth. Keep lens covered when scope not in use.

Service and Repairs

Contact your dealer for first assistance or the official distributor in your country.

www.stoegerairguns.com: online you will find the distributor list.

Warranty: 2 years from the purchase date for all Stoeger scopes.

Incidental damages, consequential damages to non-manual advices respect and non-authorized disassembling are excluding the scope from the warranty.

Technical specifications

	3-9x40AO scope		1 block magnum mount	
	mm	inch	mm	inch
Length	350	13,8		
Tube diameter	25,4	1	25,4	1
	g	lbs	g	lbs
Weight	520	1,15	125	0,28

USA

Stoeger Industries

17603 Indian Head Highway

Accokeek, MD 20607-2501

+1 301-283-6300

www.stoegerindustries.com

EUROPE, Canada, Australia-New Zealand and other countries

Contact your dealer

or the official distributor in your country

listed on the web

www.stoegerairguns.com